



AMERICAN AUDIO - VMS4 (with the firmware version 4.3 available on our forum)

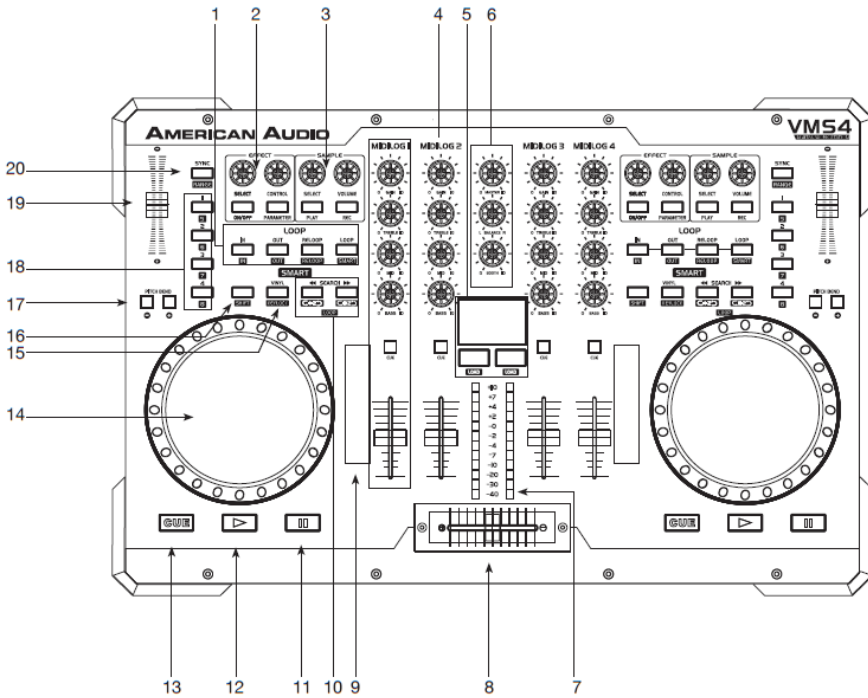


- 1 - In / Out / Loop / Auto loop
- 2 - FX Select / FX OnOff / FX Amount
- 3 - Active sample select / Volume / Play / Play Mode
- 4 - Gain / EQ / Cue / Volume [sampler = midilog 1]
- 5 - Mouse / *Load*
- 8 - Crossfader
- 9 - Browse
- 10 - Seek / *Auto loop length*
- 11 - Sync
- 12 - Play Pause
- 13 - Cue / *Cue Set*
- 14 - Scratch / *Pitch Bend*
- 15 - Vinyl mode / *Pitch Mode*
- 16 - Shift
- 17 - Pitch Bend / *Fine*
- 18 - Locators / *Clear*
- 19 - Pitch
- 20 - Sync Sampler / *Range*

VMS4 front panel configuration

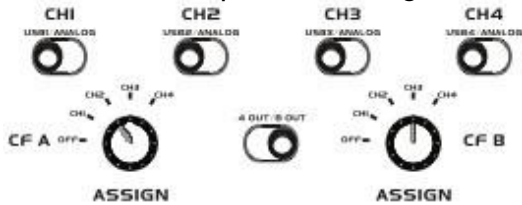

CROSS audio configuration

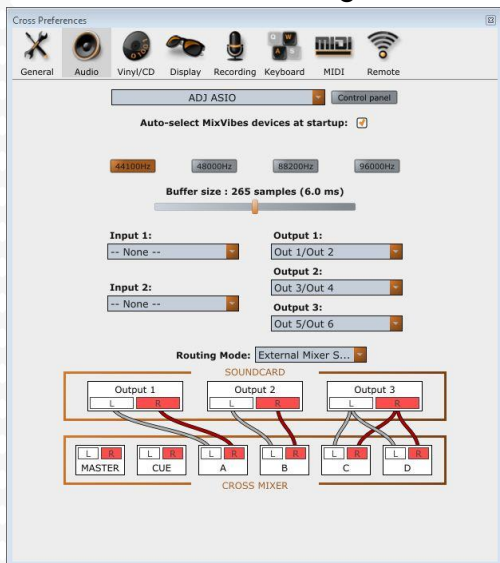

VMS4 ASIO settings

