





Numark MIXDECK QUAD - MAPPING FOR CROSS DJ

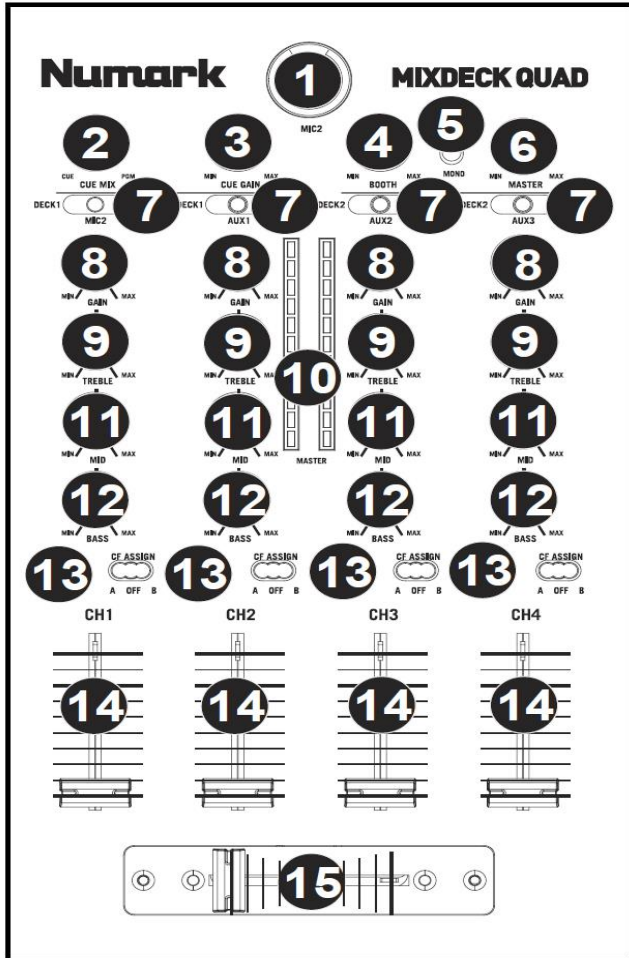

IMPORTANT FIRST TIME YOU NEED TO CONFIGURE THE TWO CHANNELS IN USB/MIDI SOURCE--> USB/MIDI

CH1 = DECK C --- CH2 = DECK A --- CH3 = DECK B --- CH4 = DECK D

2	CUE/MIX
3	MONITOR VOLUME
7	HARDWARE MIDI USB 1/2
8	GAIN C/A/B/D
9	TREBLE C/A/B/D
11	MID C/A/B/D
12	BASS C/A/B/D
13 CH1	CROSSFADER ASSIGN C (POS A)
13 CH2	CROSSFADER ASSIGN A (POS A)
13 CH3	CROSSFADER ASSIGN B (POS B)
13 CH4	CROSSFADER ASSIGN D (POS B)
14	VOLUME C/A/B/D
15	CROSSFADER

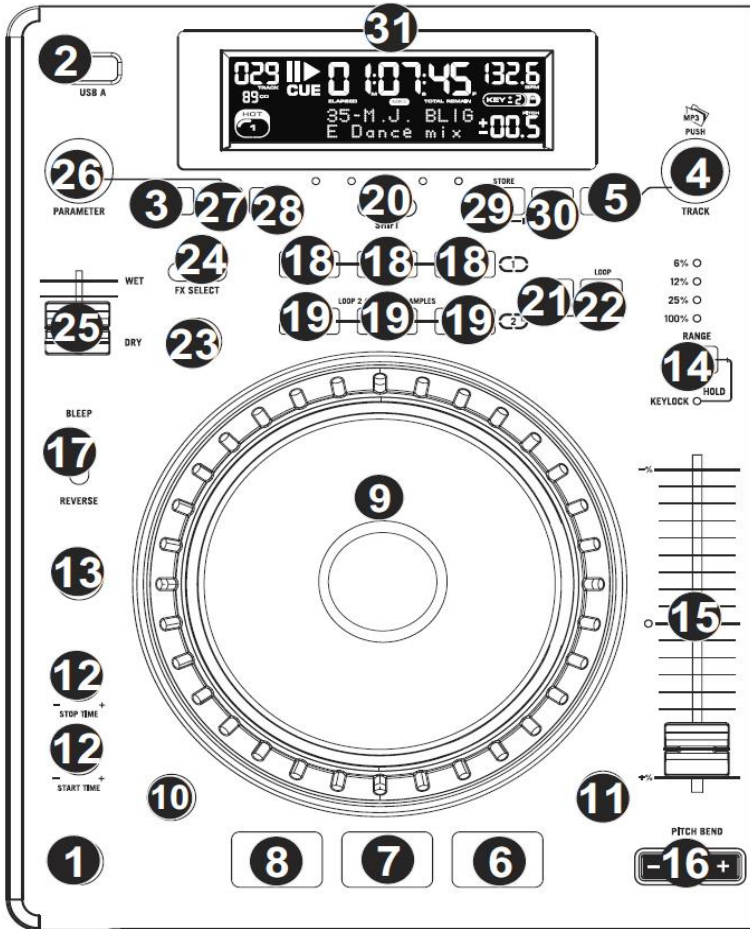

1	EMPTY PLAYER
2	HARDWARE USB KEY
3	HARDWARE SOURCE MODE
4	BROWSE THE ACTIVE BROWSABLE
4	+PUSH EXPAND/COLLAPSE TREE -- LOAD A/B/C/D
4	+SHIFT SMART-SEEK
4	+SHIFT+PUSH SMART-SEEK LENGHT
5	CHANGE THE ACTIVE BROWSABLE
6	PLAY/PAUSE
6	+SHIFT CUE-PLAY
7	SYNC WITH MASTER
8	CUE
9	JOGWHEEL
10	VINYL MODE
11	NEEDLE SEARCH = 0 (BACK TO START)
12	START TIME / BRAKE TIME
13	TAP TEMPO / CONFIRM TAP TEMPO
14	PITCH RANGE
14	+SHIFT PITCH MODE
15	PITCH VALUE
16	PITCH BEND +/-
17	BLEEP REVERSE HOLD
17	REVERSE REVERSE TOGGLE
18	LOOP IN / LOOP OUT / LOOP ON/OFF
18	+SHIFT LOOP HALVE / LOOP DOUBLE / RELOOP
19	HOTCUE 1/2/3
19	+SHIFT DELETE HOTCUE 1/2/3
20	LEFT MODIFIERS HOLD SWITCH DECK A/B <--> C/D
20	RIGHT MODIFIERS TOGGLE SWITCH DECK A/B <--> C/D
21	SLIP MODE
22	SHIFT
23	FX ON/OFF - INPUT CHANNEL A / C --- B/D
24	FX SELECT
25	FX AMOUNT
26	AUTOLOOP SELECT
26	+PUSH AUTOLOOP TRIGGER
26	+SHIFT KEY SEMITONES
27	NOTHING
28	SYNC LINK
29	NOTHING
30	SET AS MASTER (INDICATION ON LCD SCREEN)

LCD SCREEN INFOS



ON THE LEFT NUMBER OF DECK (1=A, 2=B, 3=C, 4=D)
 UNDER THIS NBR --> INDICATION OF MASTER :
 0=OFF / 11=A / 22=B / 33=C / 44=D
 INDICATION OF PLAY AND CUE
 CENTRE NUMBERS = VALUE OF THE AUTOLOOP SELECT
 ON THE RIGHT = INDICATION OF THE RANGE VALUE
 VALUE OF KEY SEMITONES
 NEEDLE SEARCH