





## Numark N4 - MAPPING FOR CROSS DJ

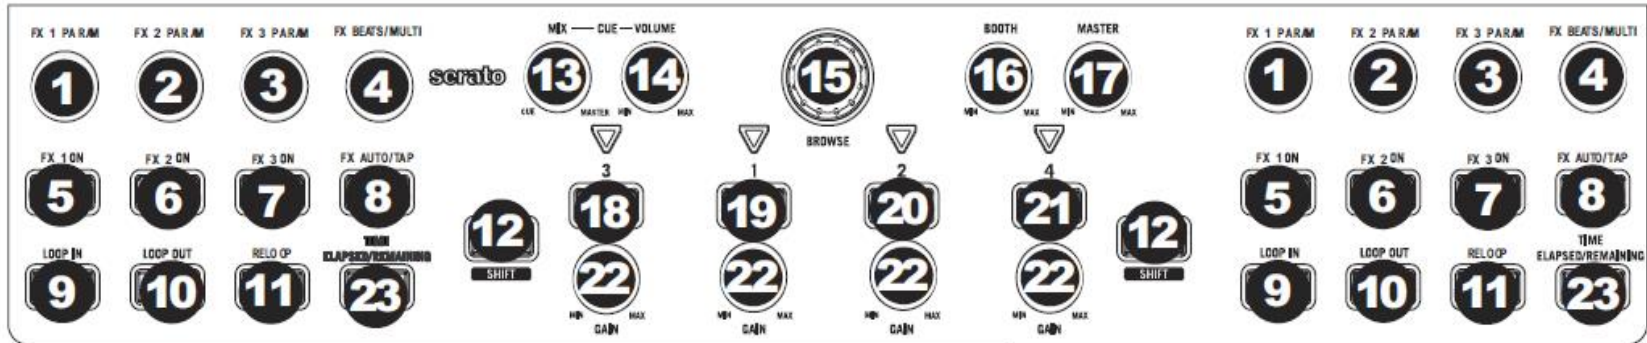


1		FX1 AMOUNT
1	+SHIFT	FX1 SELECT
2		FX1 DEPTH
3		FILTER A/C
4		AUTOLOOP SELECT
4	+SHIFT	SMART SEEK
5		FX1 ON
5		FX1 ASSIGN A/C
6		HOTCUE 1
6	+SHIFT	DELETE HOTCUE 1
7		HOTCUE 2
7	+SHIFT	DELETE HOTCUE 2
8		HOTCUE 3
8	+SHIFT	DELETE HOTCUE 3
9		LOOP IN
9	+SHIFT	LOOP HALVE
10		LOOP OUT
10	+SHIFT	LOOP DOUBLE
11		RELOOP
12		SHIFT A/C/B/D

13		CUE/MIX ROTATE
14		NOTHING (HARDWARE)
15		BROWSE ACTIVE BROWSABLE
15	+PUSH	CHANGE ACTIVE BROWSABLE
15	+SHIFT + PUS	PERFORM PRIMARY ACTION
16		NOTHING (HARDWARE)
17		NOTHING (HARDWARE)
18		LOAD C
18	+SHIFT	RELOAD AS CLONE OF MASTER
19		LOAD A
19	+SHIFT	RELOAD AS CLONE OF MASTER
20		LOAD B
20	+SHIFT	RELOAD AS CLONE OF MASTER
21		LOAD D
21	+SHIFT	RELOAD AS CLONE OF MASTER
22		GAIN C/A/B/D
23		AUTOLOOP TRIGGER
23	+SHIFT	SMART SEEK LENGTH

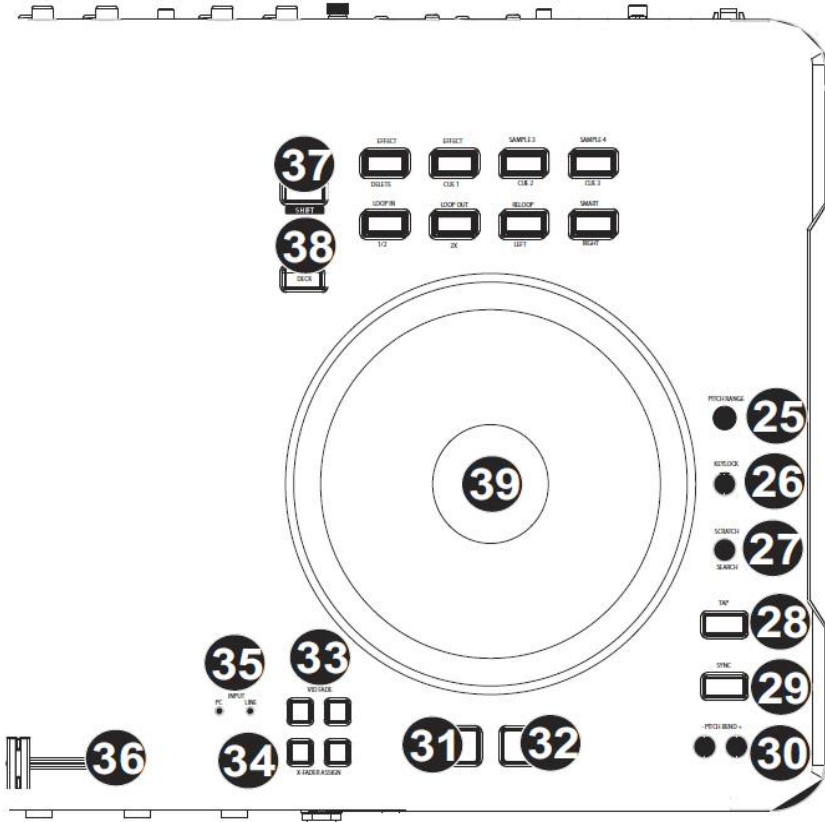

25	RANGE
25	+SHIFT SLIP MODE
26	PITCH MODE
26	+SHIFT MATCH KEY WITH MASTER
27	VINYL MODE
28	TAP TEMPO / CONFIRM TAP TEMPO
29	SYNC
29	+SHIFT SET TO MASTER
30	PITCH BEND +/-
30	+SHIFT KEY SEMITONES +/-
31	CUE
31	+SHIFT BACK TO START (NEEDLE SEARCH =0)
32	PLAY/PAUSE
32	+SHIFT CUE/PLAY
33	X-FADER ASSIGN A (1 LEFT)
33	X-FADER ASSIGN B (2 RIGHT)
34	X-FADER ASSIGN C (3 LEFT)
34	X-FADER ASSIGN D (4 RIGHT)
35	HARDWARE PC
36	CROSSFADER
37	SHIFT
38	DECK CHANGE A/C ET B/D
39	JOGWHEEL
40	FADER TEMPO / PITCH VALUE

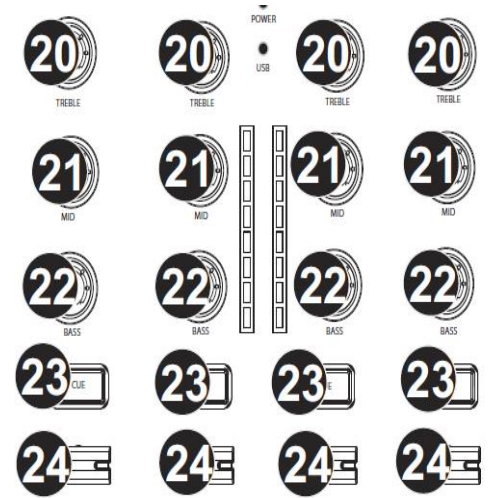

20	TREBLE A/C/B/D
20	+SHIFT START/BRAKE A/C/B/D
21	MID A/C/B/D
22	BASS A/C/B/D
23	CUE MONITOR A/C/B/D
24	FADER A/C/B/D
24	+SHIFT FADER START A/C/B/D