

**PIONEER – CDJ-2000**

**(deck A: channel 1; deck B: channel 2; focus: channel 3)**



- |                             |                                      |   |
|-----------------------------|--------------------------------------|---|
| 1 – Play                    | 9 – 4 Beat loop – <i>Loop cutter</i> | 17 – Vinyl Mode                                 |
| 2 – Cue                     | 10 – Select Active Locator           | 18 – Eject track or Select deck<br>(focus mode) |
| 3 – Seek                    | 11 – Clear Active Locator            | 19 – Browse / Load                              |
| 4 – Seek length             | 12 – Active Locator                  | 20 – Select                                     |
| 5 – Reverse                 | 13 – Pitch                           | 21 – Preview                                    |
| 6 – Shift                   | 14 – Reset Pitch                     | 22 – Jog  |
| 7 – Locators – <i>Clear</i> | 15 – Pitch Mode                      |   |
| 8 – Manual loop             | 16 – Pitch Range                     |   |